

SONY®

mode to SBC on the transmitting device. For details, refer to the operating instructions supplied with the transmitting device.

If you are using a smartphone, the Bluetooth may be impaired if you connect you using applications or rebooting the smartphone.

On the use of calling apps for iPhones and computers

- This unit supports normal incoming calls and outgoing calls for iPhones and computers, but is not supported.

On charging the unit

- This unit can be charged using USB only.

Note on charging using USB

- Charging cannot be turned on, nor can the Bluetooth® function or rechargeable functions be used, during charging.

Note on charging and connecting the supplied headband cable, even while charging the unit.

- When using the unit for a long time, the rechargeable battery may not be able to keep sufficient charge. The battery will stop to recharge periodically and repeatedly discharging and charging several times.

- When connecting to the headPHONE cable with the unit, charge the battery once every half year to prevent over-charging.

- If the length of time you can use the unit became extremely short, the rechargeable battery should be replaced with a new one. Please contact your nearest Sony dealer for a battery replacement.

Note on static electricity

- Static electricity accumulated in the body may cause mild tingling in your ears. To minimise the effect, avoid clothes made from natural materials.

If the unit does not operate properly

- Reset the unit (Fig. 10).

Check the volume/AMBIENT buttons simultaneously while charging the unit.

- If the problem persists, the unit is not defet. Pairing information is not deleted.

- If the problem persists even after the resetting operation, contact your nearest Sony dealer for the unit as follows.

Disconnect the micro-USB cable from the unit. Press and hold the **▶** and **◀** buttons. Simultaneously while holding the unit, press the **▶** and **◀** buttons 4 times and the unit will reset to the factory settings. All pairing information is deleted.

Note on the use of the unit

- After the unit is initialized, it may not connect to your iPhone or computer. In this case, delete the pairing information from the unit, the iPhone or computer, and repeat the pairing operation.

Note on the use of the unit with a smartphone

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc., and any use of such marks without the permission of the Bluetooth SIG, Inc. is prohibited.

What is noise cancelling?

- The noise cancelling circuit actually senses outside noise built-in microphones and sends an equal but opposite signal using the section on how to remove the battery from the product safely. Hand the product to the applicable collection point for the recycling of waste and electronic equipment will be staffed only.

- The noise cancelling effect may be reduced, or some noise may be heard.

- Depending on how you wear the unit, the noise cancelling effect may vary or a beeping sound (howling) may occur. In such cases, take off the unit and put it on again.

- The noise cancelling function works for noise in the low frequency range (up to 4 kHz).

Operating Systems (when using Windows)

- Windows 8.1 / Windows® 10 Pro

- Windows 8 / Windows® 8.1 Pro

- Windows 7 / Windows® 8 Pro

- Windows 7 / Windows® 8 Pro

Design and specifications are subject to change without notice.

- (when using Mac)
 - Mac OS X (version 10.9 or later)

French

N'installez pas l'appareil dans un espace restreint comme une bibliothèque ou un placard. Ne le faites pas à proximité de la télévision.

English

- Do not place the microphones of the product or the noise cancelling function of the Ambient Sound Mode to work properly, or a beeping sound (howling) may occur. In such cases, take your hands off the unit.

Others

- Be careful not to catch your finger in the unit when folding.

- When you use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is firmly connected.

- If you paste stickers, etc. on the touch panel, they may affect touch operation. Do not place correctly.

- Do not operate the unit in a place exposed to humidity, dust, or other adverse conditions. Do not leave the unit in a place with direct sunlight. Do not leave the unit in a car for a long time. It may cause a fire or explosion.

Using the BLUETOOTH device may not function on mobile phones, depending on audio conditions and location where the device is used.

- For traffic safety, do not use while driving or cycling.

- Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as at railroad crossings, train stations, and construction sites.

- Do not put weight or pressure on this unit as it may cause the unit to deform through long storage.

- Do not subject the unit to excessive shock.

- Clean the unit with a soft dry cloth.

- Do not expose the unit to water. The unit is not waterproof.

Remember to follow the precautions below:

- Be careful not to drop the unit into a sink, bathtub, or other container filled with water.

- Do not touch the unit, sunglasses or bad weather, such as in the rain or snow.

- Do not get the unit wet.

- Do not touch the unit with wet hands, nor put the unit in a damp article of clothing. The unit may get wet and this may cause a malfunction.

If you experience discomfort after using the unit, stop using the unit immediately.

- The carpal tunnel syndrome is a long-term storage or use.

- If you have any other symptoms or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Optional replacement earpads can be ordered from your nearest Sony dealer.

- There is an order to be placed with the unit and the BLUETOOTH device.

Location of the serial number label

- See Fig. 10.

Compatible iPhone/iPod models

- iPhone 7

- iPhone 6s Plus

- iPhone 6s

- iPhone 6 Plus

- iPhone 6

- iPhone 5s

- iPhone 5c

- iPhone 5

- iPhone 4s

- iPhone 4

- iPod touch (6th generation)

- iPod touch (5th generation)

Notice for customers: the following information is only applicable for customers copying EU directives.

- This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries should be made to the manufacturer.

Do not install the appliance in a confined space, such as a bookshelf or cabinet.

- Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or like for a long second: cells or batteries.

- Be aware of the risk of injury from the Secondary cells and batteries need to be charged before use. Always refer to the instructions on the battery pack or to the manual for proper charging instructions. Do not overcharge the batteries, or the cells or batteries several times to obtain the maximum capacity.

- Dispose of properly.

Notice for customers: the following information is only applicable for customers copying EU directives.

- This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries should be made to the manufacturer.

Do not use the unit with any following accessories available:

- http://www.compliance.sony.de/

Disposal of waste and electronic equipment

- This product is not applicable in the European Union and other countries with similar collection systems)

- This symbol on the product, together with the one on the packaging indicates that the product and the battery shall not be treated as household waste. It should be disposed of in a designated recycling point.

- Depending on the device to be connected, it may require some time to start charging.

If sound skips frequently during playback

- The situation may be improved by setting the station quality mode to "priority on stable connection." For details, refer to the user's guide.

- The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback quality.

- The actual range will vary depending on factors such as obstacles in the area, the operating system, software application, and Bluetooth standard profiles indicate the purpose of Bluetooth® connections between devices.

Code: Audio signal compression and conversion format

Advanced Audio Coding

Wireless stereo headset

- Advanced Audio Coding

Power source:

- DC 3.6 V Built-in lithium ion rechargeable battery

Mass: Approx. 29 g

- Approx. 29 g when charging using USB

Operating temperature: 0 °C to 40 °C (when charging)

- Approx. 0 °C to 40 °C (when not charging)

Usage hours:

- When connecting via the BLUETOOTH device

- Music playback time: Max. 28 hours (NC ON)

- Max. 34 hours (NC OFF)

- When using the unit with a rechargeable battery (when connecting via the BLUETOOTH device)

- Music playback time: Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 200 hours (NC ON)

- Max. 200 hours (NC ON)

When connecting via the headPHONE cable with the unit:

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

Receiver

- Type: Closed, Dynamic

- Frequency response: 5 Hz - 40,000 Hz (JEITA) (at 10 mm)

- Headphone cable with the unit turned on

Impedance:

- 32 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- Sensitivity: 103 dB/mV (when connecting via the headphone cable with the unit turned on)

- 103 dB/mV (when connecting via the headphone cable with the unit turned on)

Microphone

- Type: Condenser

- Directivity: Omni direction

- Effective frequency range: 50 Hz - 8,000 Hz

System requirements for battery charge using USB

(As of August 2017)
Personal Computer pre-installed with Windows 8.1 or later following operating systems an USB port:

Operating Systems (when using Windows)

- Windows 8.1 / Windows® 10 Pro

- Windows 8 / Windows® 8.1 Pro

- Windows 7 / Windows® 8 Pro

- Windows 7 / Windows® 8 Pro

Design and specifications are subject to change without notice.

- (when using Mac)
 - Mac OS X (version 10.9 or later)

French

N'installez pas l'appareil dans un espace restreint comme une bibliothèque ou un placard. Ne le faites pas à proximité de la télévision.

English

- Do not place the microphones of the product or the noise cancelling function of the Ambient Sound Mode to work properly, or a beeping sound (howling) may occur. In such cases, take your hands off the unit.

Others

- Be careful not to catch your finger in the unit when folding.

- When you use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is firmly connected.

- If you paste stickers, etc. on the touch panel, they may affect touch operation. Do not place correctly.

- Do not operate the unit in a place exposed to humidity, dust, or other adverse conditions. Do not leave the unit in a place with direct sunlight. Do not leave the unit in a car for a long time. It may cause a fire or explosion.

Using the BLUETOOTH device may not function on mobile phones, depending on audio conditions and location where the device is used.

- For traffic safety, do not use while driving or cycling.

- Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as at railroad crossings, train stations, and construction sites.

- Do not put weight or pressure on this unit as it may cause the unit to deform through long storage.

- Do not subject the unit to excessive shock.

- Clean the unit with a soft dry cloth.

- Do not expose the unit to water. The unit is not waterproof.

Remember to follow the precautions below:

- Be careful not to drop the unit into a sink, bathtub, or other container filled with water.

- Do not touch the unit, sunglasses or bad weather, such as in the rain or snow.

- Do not get the unit wet.

- Do not touch the unit with wet hands, nor put the unit in a damp article of clothing. The unit may get wet and this may cause a malfunction.

If you experience discomfort after using the unit, stop using the unit immediately.

- The carpal tunnel syndrome is a long-term storage or use.

- If you have any other symptoms or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Optional replacement earpads can be ordered from your nearest Sony dealer.

- There is an order to be placed with the unit and the BLUETOOTH device.

Location of the serial number label

- See Fig. 10.

Compatible iPhone/iPod models

- iPhone 7

- iPhone 6s Plus

- iPhone 6s

- iPhone 6 Plus

- iPhone 6

- iPhone 5s

- iPhone 5c

- iPhone 5

- iPhone 4s

- iPhone 4

- iPod touch (6th generation)

- iPod touch (5th generation)

Notice for customers: the following information is only applicable for customers copying EU directives.

- This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries should be made to the manufacturer.

Do not use the unit with any following accessories available:

- http://www.compliance.sony.de/

Disposal of waste and electronic equipment

- This product is not applicable in the European Union and other countries with similar collection systems)

- This symbol on the product, together with the one on the packaging indicates that the product and the battery shall not be treated as household waste. It should be disposed of in a designated recycling point.

- Depending on the device to be connected, it may require some time to start charging.

If sound skips frequently during playback

- The situation may be improved by setting the station quality mode to "priority on stable connection." For details, refer to the user's guide.

- The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback quality.

- The actual range will vary depending on factors such as obstacles in the area, the operating system, software application, and Bluetooth standard profiles indicate the purpose of Bluetooth® connections between devices.

Code: Audio signal compression and conversion format

Advanced Audio Coding

Wireless stereo headset

- Advanced Audio Coding

Power source:

- DC 3.6 V Built-in lithium ion rechargeable battery

Mass: Approx. 29 g

- Approx. 29 g when charging using USB

Operating temperature: 0 °C to 40 °C (when charging)

- Approx. 0 °C to 40 °C (when not charging)

Usage hours:

- When connecting via the BLUETOOTH device

- Music playback time: Max. 28 hours (NC ON)

- Max. 34 hours (NC OFF)

- When using the unit with a rechargeable battery (when connecting via the BLUETOOTH device)

- Music playback time: Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 200 hours (NC ON)

- Max. 200 hours (NC ON)

When connecting via the headPHONE cable with the unit:

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

Receiver

- Type: Closed, Dynamic

- Frequency response: 5 Hz - 40,000 Hz (JEITA) (at 10 mm)

- Headphone cable with the unit turned on

Impedance:

- 32 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- Sensitivity: 103 dB/mV (when connecting via the headphone cable with the unit turned on)

- 103 dB/mV (when connecting via the headphone cable with the unit turned on)

Microphone

- Type: Condenser

- Directivity: Omni direction

- Effective frequency range: 50 Hz - 8,000 Hz

System requirements for battery charge using USB

(As of August 2017)
Personal Computer pre-installed with Windows 8.1 or later following operating systems an USB port:

Operating Systems (when using Mac)

- Mac OS X (version 10.9 or later)

French

N'installez pas l'appareil dans un espace restreint comme une bibliothèque ou un placard. Ne le faites pas à proximité de la télévision.

English

- Do not place the microphones of the product or the noise cancelling function of the Ambient Sound Mode to work properly, or a beeping sound (howling) may occur. In such cases, take your hands off the unit.

Others

- Be careful not to catch your finger in the unit when folding.

- When you use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is firmly connected.

- If you paste stickers, etc. on the touch panel, they may affect touch operation. Do not place correctly.

- Do not operate the unit in a place exposed to humidity, dust, or other adverse conditions. Do not leave the unit in a place with direct sunlight. Do not leave the unit in a car for a long time. It may cause a fire or explosion.

Using the BLUETOOTH device may not function on mobile phones, depending on audio conditions and location where the device is used.

- For traffic safety, do not use while driving or cycling.

- Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as at railroad crossings, train stations, and construction sites.

- Do not put weight or pressure on this unit as it may cause the unit to deform through long storage.

- Do not subject the unit to excessive shock.

- Clean the unit with a soft dry cloth.

- Do not expose the unit to water. The unit is not waterproof.

Remember to follow the precautions below:

- Be careful not to drop the unit into a sink, bathtub, or other container filled with water.

- Do not touch the unit, sunglasses or bad weather, such as in the rain or snow.

- Do not get the unit wet.

- Do not touch the unit with wet hands, nor put the unit in a damp article of clothing. The unit may get wet and this may cause a malfunction.

If you experience discomfort after using the unit, stop using the unit immediately.

- The carpal tunnel syndrome is a long-term storage or use.

- If you have any other symptoms or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Optional replacement earpads can be ordered from your nearest Sony dealer.

- There is an order to be placed with the unit and the BLUETOOTH device.

Location of the serial number label

- See Fig. 10.

Compatible iPhone/iPod models

- iPhone 7

- iPhone 6s Plus

- iPhone 6s

- iPhone 6 Plus

- iPhone 6

- iPhone 5s

- iPhone 5c

- iPhone 5

- iPhone 4s

- iPhone 4

- iPod touch (6th generation)

- iPod touch (5th generation)

Notice for customers: the following information is only applicable for customers copying EU directives.

- This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries should be made to the manufacturer.

Do not use the unit with any following accessories available:

- http://www.compliance.sony.de/

Disposal of waste and electronic equipment

- This product is not applicable in the European Union and other countries with similar collection systems)

- This symbol on the product, together with the one on the packaging indicates that the product and the battery shall not be treated as household waste. It should be disposed of in a designated recycling point.

- Depending on the device to be connected, it may require some time to start charging.

If sound skips frequently during playback

- The situation may be improved by setting the station quality mode to "priority on stable connection." For details, refer to the user's guide.

- The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback quality.

- The actual range will vary depending on factors such as obstacles in the area, the operating system, software application, and Bluetooth standard profiles indicate the purpose of Bluetooth® connections between devices.

Code: Audio signal compression and conversion format

Advanced Audio Coding

Wireless stereo headset

- Advanced Audio Coding

Power source:

- DC 3.6 V Built-in lithium ion rechargeable battery

Mass: Approx. 29 g

- Approx. 29 g when charging using USB

Operating temperature: 0 °C to 40 °C (when charging)

- Approx. 0 °C to 40 °C (when not charging)

Usage hours:

- When connecting via the BLUETOOTH device

- Music playback time: Max. 28 hours (NC ON)

- Max. 34 hours (NC OFF)

- When using the unit with a rechargeable battery (when connecting via the BLUETOOTH device)

- Music playback time: Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 34 hours (NC OFF)

- Max. 200 hours (NC ON)

- Max. 200 hours (NC ON)

When connecting via the headPHONE cable with the unit:

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

- Max. 40 hours

Receiver

- Type: Closed, Dynamic

- Frequency response: 5 Hz - 40,000 Hz (JEITA) (at 10 mm)

- Headphone cable with the unit turned on

Impedance:

- 32 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- 16 Ω (1 kHz) (when connecting via the headphone cable with the unit turned on)

- Sensitivity: 103 dB/mV (when connecting via the headphone cable with the unit turned on)

- 103 dB/mV (when connecting via the headphone cable with the unit turned on)

Microphone

- Type: Condenser

- Directivity: Omni direction

- Effective frequency range: 50 Hz - 8,000 Hz

System requirements for battery charge using USB

(As of August 2017)
Personal Computer pre-installed with Windows 8.1 or later following operating systems an USB port:

Operating Systems (when using Mac)

- Mac OS X (version 10.9 or later)

French

N'installez pas l'appareil dans un espace restreint comme une bibliothèque ou un placard. Ne le faites pas à proximité de la télévision.

English

- Do not place the microphones of the product or the noise cancelling function of the Ambient Sound Mode to work properly, or a beeping sound (howling) may occur. In such cases, take your hands off the unit.

Others

- Be careful not to catch your finger in the unit when folding.

- When you use the unit as wired headphones, use the supplied headphone cable only. Make sure that the headphone cable is firmly connected.

- If you paste stickers, etc. on the touch panel, they may affect touch operation. Do not place correctly.

- Do not operate the unit in a place exposed to humidity, dust, or other adverse conditions. Do not leave the unit in a place with direct sunlight. Do not leave the unit in a car for a long time. It may cause a fire or explosion.

Using the BLUETOOTH device may not function on mobile phones, depending on audio conditions and location where the device is used.

- For traffic safety, do not use while driving or cycling.

- Do not use the unit in places where it would be dangerous if you are unable to hear ambient sound, such as at railroad crossings, train stations, and construction sites.

- Do not put weight or pressure on this unit as it may cause the unit to deform through long storage.

- Do not subject the unit to excessive shock.

- Clean the unit with a soft dry cloth.

- Do not expose the unit to water. The unit is not waterproof.

Remember to follow the precautions below:

- Be careful not to drop the unit into a sink, bathtub, or other container filled with water.

- Do not touch the unit, sunglasses or bad weather, such as in the rain or snow.

- Do not get the unit wet.

- Do not touch the unit with wet hands, nor put the unit in a damp article of clothing. The unit may get wet and this may cause a malfunction.

If you experience discomfort after using the unit, stop using the unit immediately.

- The carpal tunnel syndrome is a long-term storage or use.

- If you have any other symptoms or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

Optional replacement earpads can be ordered from your nearest Sony dealer.

- There is an order to be placed with the unit and the BLUETOOTH device.

Location of the serial number label

- See Fig. 10.

Compatible iPhone/iPod models

- iPhone 7

- iPhone 6s Plus

- iPhone 6s

- iPhone 6 Plus

- iPhone 6

- iPhone 5s

- iPhone 5c

- iPhone 5

- iPhone 4s

- iPhone 4

- iPod touch (6th generation)

- iPod touch (5th generation)

Notice for customers: the following information is only applicable for customers copying EU directives.

- This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries should be made to the manufacturer.

Do not use the unit with any following accessories available:

- http://www.compliance.sony.de/

Disposal of waste and electronic equipment

- This product is not applicable in the European Union and other countries with similar collection systems)

- This symbol on the product, together with the one on the packaging indicates that the product and the battery shall not be treated as household waste. It should be disposed of in a designated recycling point.

- Depending on the device to be connected, it may require some time to start charging.

If sound skips frequently during playback

- The situation may be improved by setting the station quality mode to "priority on stable connection." For details, refer to the user's guide.

- The situation may be improved by changing the wireless playback quality settings or fixing the wireless playback quality.

- The actual range will vary depending on factors such as obstacles in the area, the operating system, software application, and Bluetooth standard profiles indicate the purpose of Bluetooth® connections between devices.

Qu'est-ce que le réducteur de bruits sans fil?

Le circuit du réducteur de bruits capte les bruits extérieurs grâce à ses micros. Ces micros et envoient l'appareil un signal analogique des bruits égaux, mais opposé. Il les annule donc. Les bruits ne sont pas réduits, mais ils ne sont pas perçus.

- L'effet du réducteur de bruits peut varier d'un signal sonore à un autre.

- Lorsque vous utilisez l'appareil, retirez le câble pour que les bruits ne soient pas réduits.

- Le réducteur de bruits agit principalement sur la gamme des basses fréquences. Les bruits de haute fréquence ne sont pas complètement inaudibles.

